


Installation for Sisal Tiles

The tiles should be acclimatized in the room where the tiles will be installed. We recommend a minimum of 24 hours. An arrow is shown on the back of each tile. Tiles should be placed in a “checker-board” (see figure)

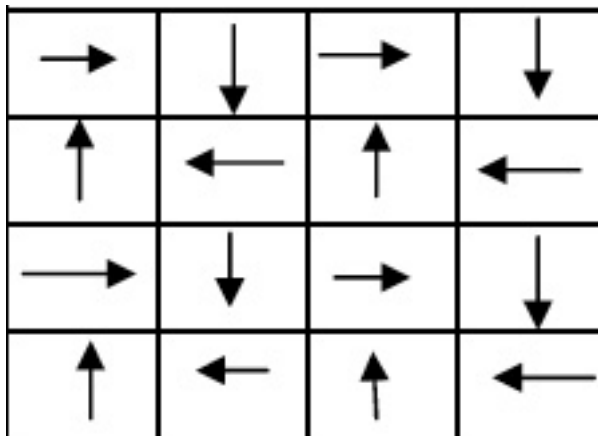

Loose Installation (exhibition stands, temporary, etc.)

Installation without adhesive, but please pay attention to the fact that the stability of the tiles can change in humid circumstances.

Permanent Installation (domestic, hobby-room, showroom, etc.) Installation with pressure sensitive adhesive (ie. Ultrabond ECO 810 or 811). Start in the center of the room and expand to the outside.